

These instructions are intended for Management only. In order to prevent tampering with the equipment by unauthorized personnel, please keep these instructions in a safe place.

Your E-Z Flow GEN IV Timer system can be set for up to six different timed shots. These instructions will allow you to program the desired times.



- Step 1:** Be sure Heated Hoses are pressurized BEFORE turning on power.
- Step 2:** Press the ■ button (upper left of display) to get the temperature.
- Step 3:** Press the ■ button again to get to the Timer screen. You will see the six times displayed, and whether the timer function is ON or OFF for each one.
- Step 4:** Press the ► button (lower left of display) to set the time for #1.
- Step 5:** Using the number buttons as shown (NOT the up and down buttons), enter the time you want. The timer reads in seconds, the format is 000.00, and you must enter all five digits. There will always be two decimal places for fractions of a second. So, to enter five seconds, you will enter 005.00, and to enter 3.8 seconds, you will enter 003.80. If you make a mistake, use the ■ button to erase each digit.
- Step 6:** After entering the desired time, press the Timer Set button (lower right of display; see diagram above).
- Step 7:** After pressing "Timer Set", press the "On/Off" button (upper right of display; see diagram). This will activate this setting. (If you are changing settings, be sure to turn all unused shots to "OFF".)
- Step 8:** To go to the next shot (#2), press the ► button and repeat Steps 5 through 7.
- Step 9:** When you are finished programming and want to begin operation, press the "Set" button, then the ■ button; this will take you back to the previous setting. Keep pressing the "Set" and ■ button alternately until you are back to the "Pumps Activated?" screen.

The timers are now active as set. Press the ■ button to begin operation.